

# ST Soft Enclosure Assembly Instructions



Treker 4220ST & 4420ST Series

Manual No. 701-192M



## Before You Start



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

**IMPORTANT:** Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these instructions for future reference and parts ordering information.

Your ST Soft Enclosure is exclusively designed for the Land Pride 4220ST & 4420ST Trekers. Please read these installation instructions and your vehicle Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns.

A separate 4220ST & 4420ST Treker Parts Manual is available free of charge at [www.landpride.com](http://www.landpride.com) or can be purchased from your nearest Land Pride dealer. Have model and serial numbers of your Treker handy when placing an order.

### Manual Part Numbers:

- Operator's Manual . . . . . 700-504M
- Parts Manual . . . . . 700-504P

## General Information

These assembly instructions apply to the following ST Enclosure listed below:

**701-191A CAB, ST TREKER SOFT SIDE**

### Tools required:

- Pencil
- Center punch
- Hammer
- Electric drill with 1/8" drill bit
- Extension cord (if required)
- Pop rivet gun

### Further Assistance

Your dealer wants you to be satisfied with your new ST Soft Enclosure. If for any reason you do not understand any part of this manual or are not satisfied with the service received, the following actions are suggested:

1. Discuss the matter with your dealership service manager making sure he is aware of any problems you may have and that he has had the opportunity to assist you.
2. If you are still not satisfied, seek out the owner or general manager of the dealership, explain the problem and request assistance.
3. For further assistance write to:

**Land Pride Service Department**  
**1525 East North Street**  
P.O. Box 5060  
Salina, Ks. 67402-5060

E-mail address  
[lp servicedept@landpride.com](mailto:lp servicedept@landpride.com)

## Assembly Instructions

### Assembly Instructions

Before you begin, please read these installation instructions and the operator's manual thoroughly. Check to be sure all parts and tools are accounted for. Retain these instructions for future reference.

This enclosure attaches to the 20 Series ST Treker using snaps that are supplied with this kit. Installation of any item is easier if vehicle is clean and free of debris.


Kit Components:

Qty.	Part Description
1	Enclosure
1	Hardware Bag consisting of: (4-Turn Fasteners & 8 Pop Rivets)
2	Short Straps (1 wrapped around the enclosure package and 1 snapped to the cab enclosure).

**Approximate Installation Time:** 45 Minutes

**Refer to Figure 1:**

1. Remove strap wrapped around packaged enclosure and save for installing later.
2. Unroll enclosure and spread it out over the cargo box with center strap facing up and positioned on the same side as the tailgate. Enclosure side panels should hang over cargo box side panels.
3. Raise cargo box up 12" to 18".
4. Slide enclosure forward and drape approximately 12" over cargo box front panel.
5. Pull all snaps open on both door panels.

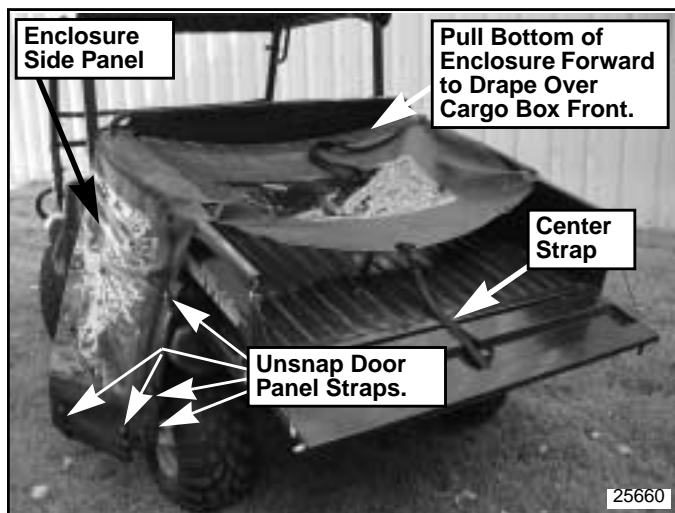

**Soft Cab Unfolded**  
Figure 1

**Refer to Figure 2:**

6. Slide the right fitted corner over the back right corner of the 4-Post Accessory bar.
7. Slide the left fitted corner over the back left corner of the 4-Post Accessory bar.



**Installing Fitted Corners**  
Figure 2

**Refer to Figure 3:**

8. Thread center strap under the canopy top and over the back horizontal accessory bar.
9. Pull strap towards the front and over the front horizontal accessory bar.
10. Buckle strap together in the middle and pull on strap end to tighten strap. Remove strap excess by tying it together in the center.




**Installing Center Strap**  
Figure 3

## Assembly Instructions

Refer to Figures 4, 5, 6 & 7:

**NOTE:** The canopy top and windshield may need to be pushed gently away from the accessory bar in order to thread the straps between the canopy and accessory bar and between the windshield and accessory bar.


11. From inside the cab, attach right side door panel to the accessory bar by starting at the back top corner working forward and down to the front pulling each side panel strap over the accessory bar frame and snapping it to the enclosure.
12. Repeat step 11 for the left side.

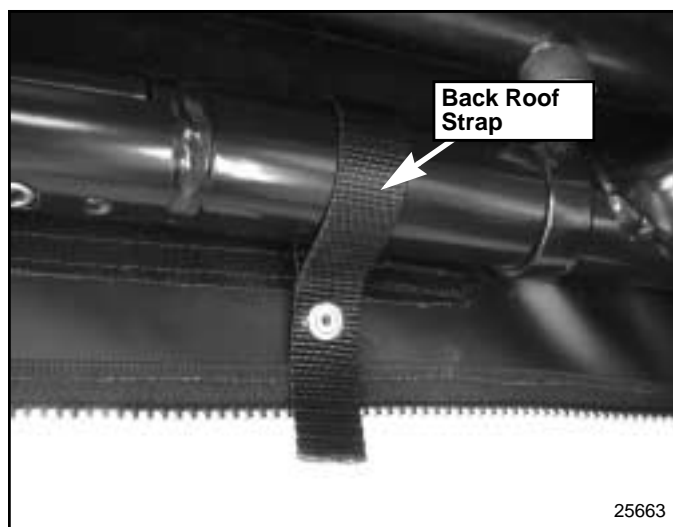


Snap Door Panel Straps Around 4-Post Accessory Bar  
Figure 4



Snap Door Panel Straps Around 4-Post Accessory Bar  
Figure 5

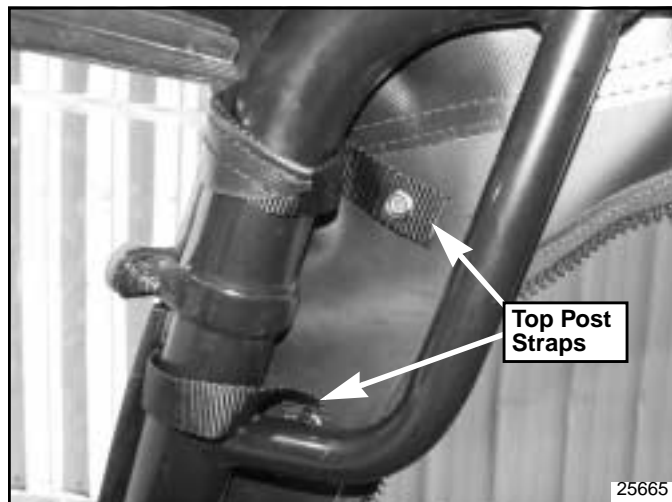

Snap Door Panel Straps Around 4-Post Accessory Bar  
Figure 6

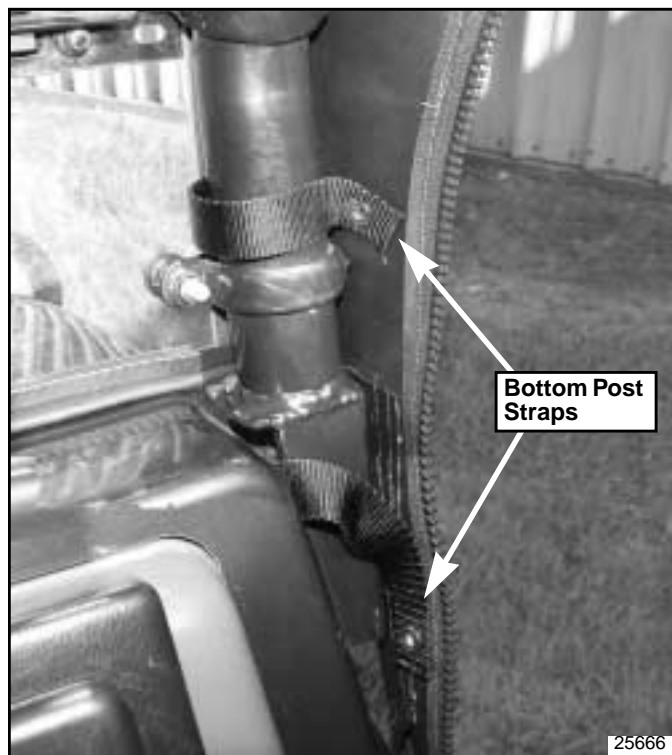


Snap Door Panel Straps Around 4-Post Accessory Bar  
Figure 7

## Assembly Instructions

**Refer to Figure 8:**


13. Attached to the back right corner at about seat height is the rear panel strap. Thread this strap in front of the back accessory post and behind the seat back to the left side.

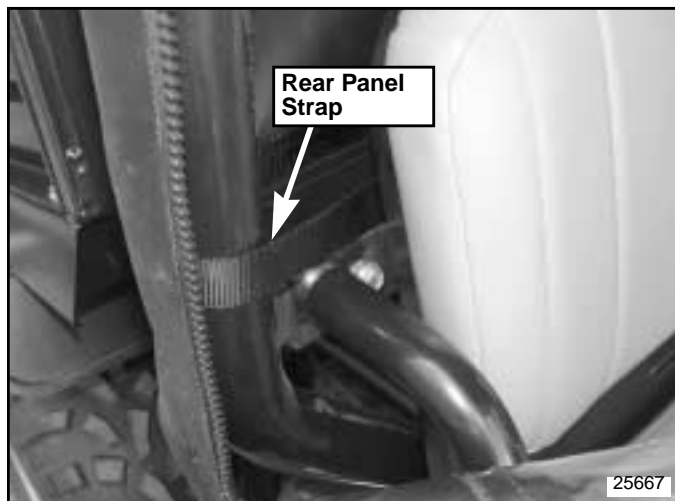

**Installing Long Strap Behind Seat Back  
Figure 8**

**Refer to Figure 9:**


14. Buckle rear panel strap to the shorter strap on the left side. Pull rear panel strap tight behind the seat.

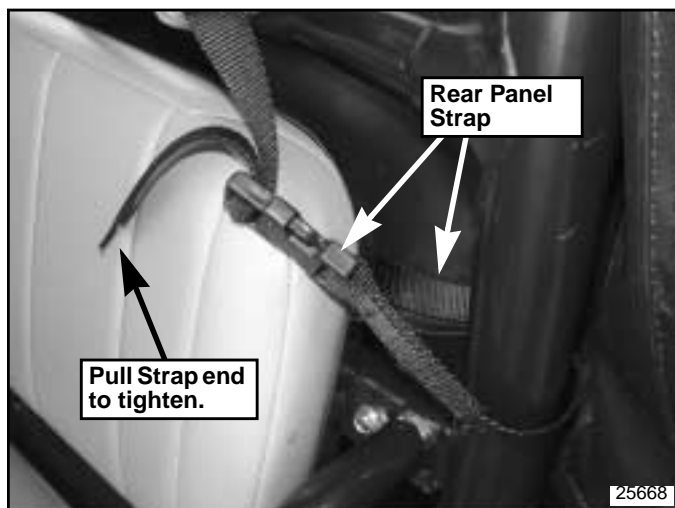


**Installing Long Strap Behind Seat Back  
Figure 9**

**Refer to Figures 10 & 11:**

15. Make required adjustments to the enclosure to smooth out its surfaces. Door panels should be zipped up when making these adjustments.
  - a. Check how the back panel fits. Adjust as needed.
  - b. Check how the door panel fits along the top from front to back. Adjust as needed.
  - c. Check how the door panel fits under the front windshield. Adjust as needed.

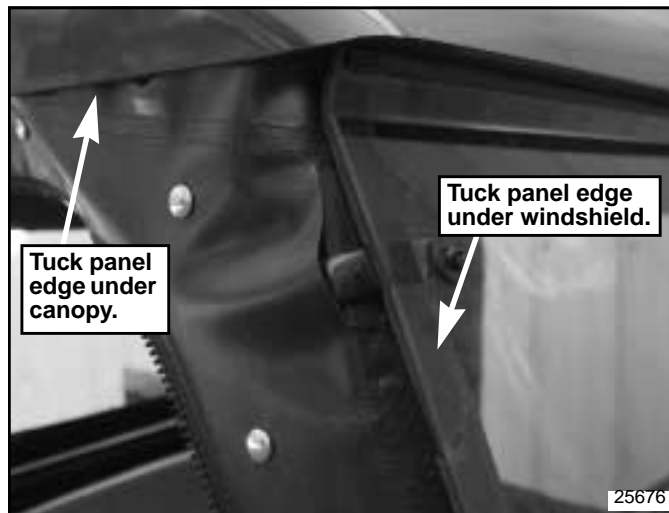

**Tuck Door Panel Edge Smoothly Under Windshield  
Figure 10**

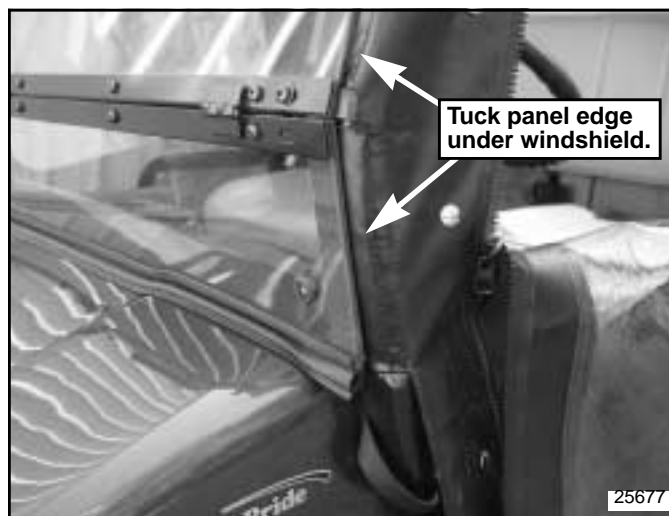


**Tuck Door Panel Edge Smoothly Under Windshield  
Figure 11**

## Assembly Instructions

**Refer to Figure 12:**


16. Located at the bottom of both door panels are two metal oval eyelets. Pull left door panel down at the back and trace eyelet oval shape onto the Treker firewall panel edge.

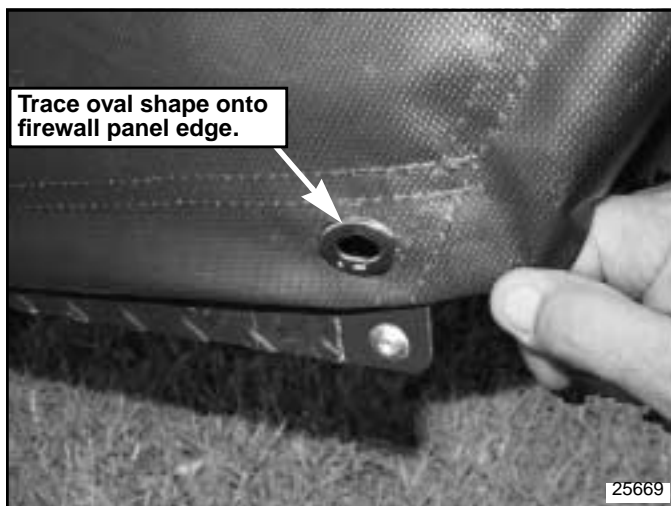

**Locate Lower Turn Fastener Mounting Position**  
Figure 12

**Refer to Figure 13:**


17. With door panel moved out of the way, use a turn fastener to mark location of its mounting holes on the firewall panel edge.

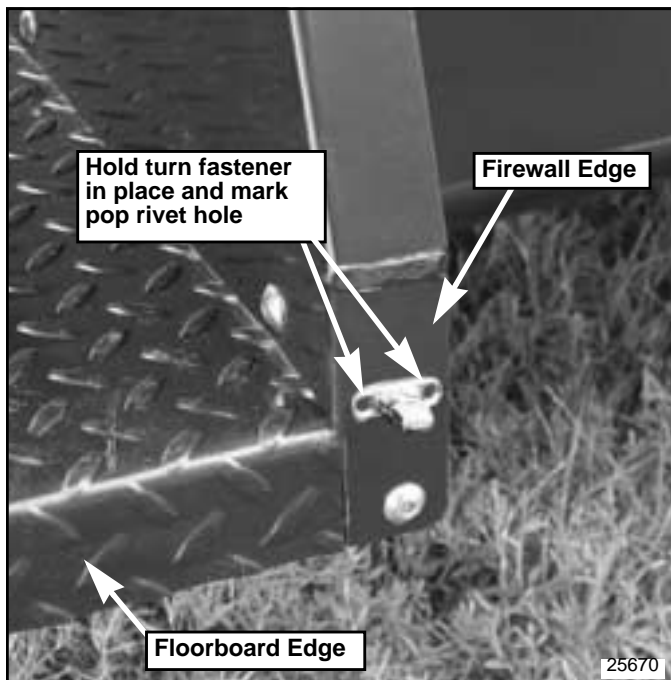

**Mark & Drill 1/8" Holes**  
Figure 13

**Refer to Figure 14:**


18. Drill two 1/8" dia. holes in the firewall edge and mount turn fastener with pop rivet gun using 3mm x 8mm pop rivets enclosed.

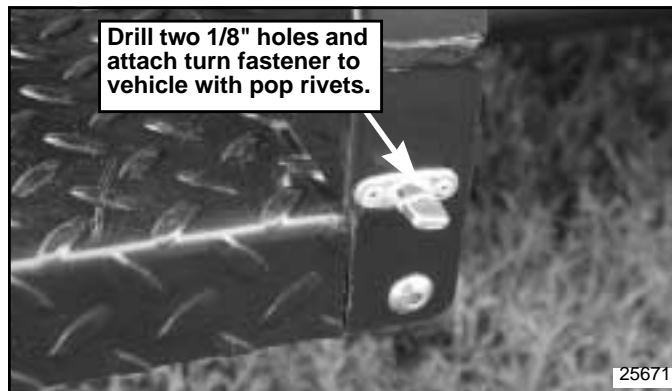

**Install Turn Fastener With 3mm x 8mm Pop Rivets**  
Figure 14

**Refer to Figure 15:**


19. Fasten bottom back corner of door panel to the turn fastener.

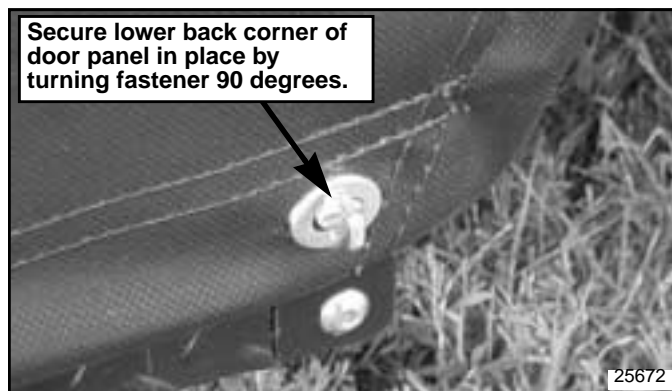

**Fasten Door Panel With Rear Turn Fastener**  
Figure 15

**Refer to Figure 16:**

- 20. Pull left door panel down at the front and trace front eyelet pattern onto the floorboard edge.
- 21. Drill necessary holes and mount front turn buckle using the same procedure outlined in steps 17 & 18.
- 22. Fasten front door panel to the front turn fastener.

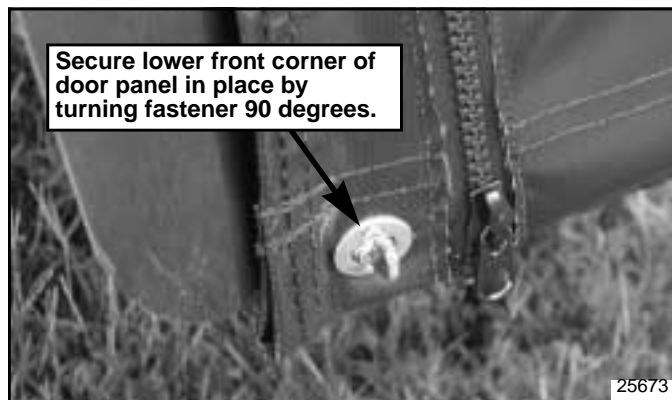


**Fasten Door Panel With Front Turn Fastener**  
Figure 16

23. Repeat steps 16 through 22 for the right door panel.

## Operating Instructions

### Refer to Figure 17:

24. Attached to the left and right side of the back panel are two short door straps. Buckle these straps to the rear accessory post to keep them from falling off the enclosure when not in use.
25. Lower cargo box.

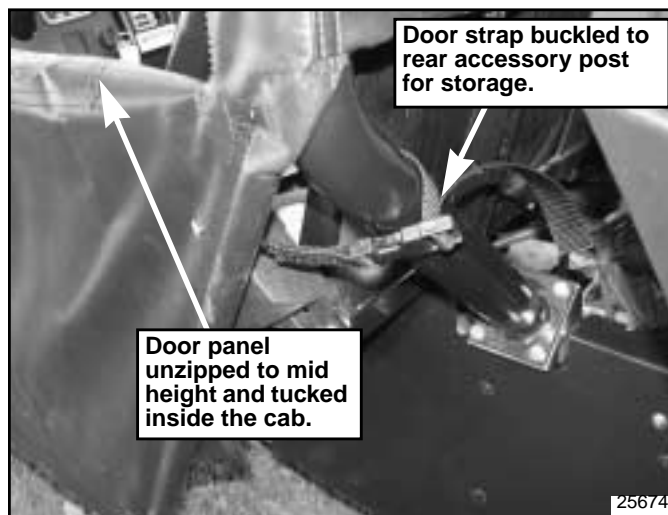

Door Panel Unzipped to Mid Height  
Door Strap Shown in Storage Position  
Figure 17

## Operating Instructions

### Refer to Figure 17:

Door panels can be unzipped to window height and tucked inside the cab to allow additional air movement.

### Refer to Figure 18:

They also can be completely unzipped, rolled up tight and secured by buckling the door straps around them at mid height. When not in use, buckle door straps to the back accessory post to ensure they won't become lost.

The soft cab enclosure can easily be removed and reinstalled to suit your seasonal needs. Make sure the soft cab is dry before folding it up for storage and that all loose straps are kept with enclosure. Store enclosure in a dry location where rodents cannot access.

Clean enclosure and windows with a vinyl cleaner. **DO NOT** use petroleum distillates as they will damage the materials.

Keep zippers clean and free of dirt. Spray a silicone lubricant on the zippers frequently to ward off dirt and to lubricate it. A dirty zipper will have high wear and become hard to operate.



Door Panel Rolled Up & Secure With Door Strap  
Figure 18

***Operating Instructions***

---

**Notes**



Corporate Office: P.O. Box 5060  
Salina, Kansas 67402-5060 USA  
[www.landpride.com](http://www.landpride.com)

---