

Fiberglass Canopy Assembly Instructions



Treker 4200/4400 NT/ST and 4210/4410 ST Series

Manual No. 701-121M

Before You Start



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

IMPORTANT: Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Your Land Pride accessory kit is exclusively designed for your Land Pride vehicle. Please read these installation instructions and the vehicle Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns. Also included in the Operator's Manual is important information on operation, adjustment, troubleshooting, and maintenance for this attachment (some manual sections do not apply to all accessories).

A separate Parts Manual for replacement parts can be purchased from your dealer or available free of charge at www.landpride.com. Have model and serial numbers handy when placing an order.

Manual Part Numbers:

- Operator's Manual (All NT & ST Series) . . . 700-108M
- Parts Manual (4200/4400 NT/ST Series) . . . 700-108P
- Parts Manual (4210/4410 ST Series) 700-109P

General Information

These assembly instructions apply to the following Fiberglass Canopy Accessories listed below:

- 701-078A NT Treker Fiberglass Canopy (Green)
- 701-079A NT Treker Fiberglass Canopy (Red)
- 701-080A NT Treker Fiberglass Canopy (Yellow)
- 701-081A ST Treker Fiberglass Canopy (Green)
- 701-082A ST Treker Fiberglass Canopy (Red)
- 701-083A ST Treker Fiberglass Canopy (Yellow)

Tools required:

- Work Gloves
- Safety Glasses
- Drill with 5/32" drill bit
- 1/4" Drill Stop
- 3/8" Hex Socket Wrench

Assembly Instructions

A detailed listing of parts for each accessory kit is provided on page 3. Use the list that is for your Treker as a checklist to inventory parts received. Please contact your local Land Pride dealer for any missing hardware.

Initial Preparations


Before servicing the vehicle the following procedure must be met to secure the vehicle:

1. Park vehicle on a level surface. **Don't work under or around a vehicle parked on an incline.**
2. Make the following gear and park brake selections:
 - a. **4200/4400 NT & ST Trekers:**
 - Set shift selector in forward gear.
 - Set park brake.
 - b. **4210ST & 4410ST Trekers.**
 - Set shift selector in Park.
3. Turn ignition switch off and remove switch key.
4. Chock front and back of a wheel to prevent the vehicle from rolling.

IMPORTANT: Windshields and Back Screen, when included, should be installed before the Canopy top is installed.

Refer to Figure 1 below & Figure 3 on page 2:

5. Position canopy onto the accessory bar with the front edge of the top resting against the front accessory bar cross bar. The back of the canopy overhangs the back cross bar to fully protect the operator.

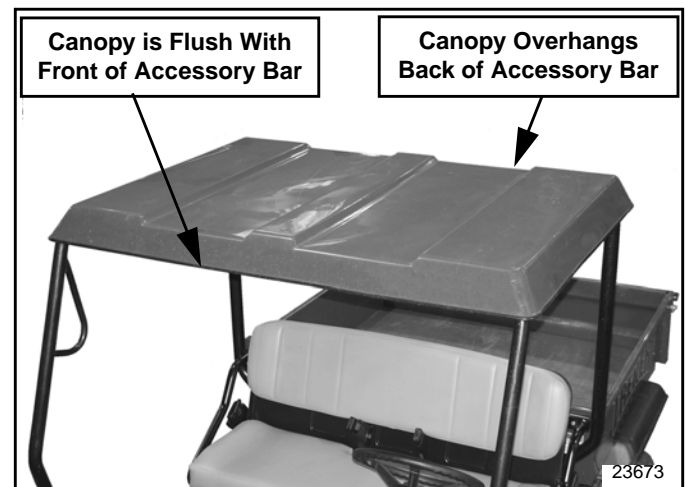


Installed Canopy
Figure 1

Assembly Instructions

Refer to Figure 2:

6. Locate the hardware bag. Inside the bag should be four 1 1/4" canopy clamps and eight 1/4" - 14 x 3/4" lg. hex head self tapping screws.

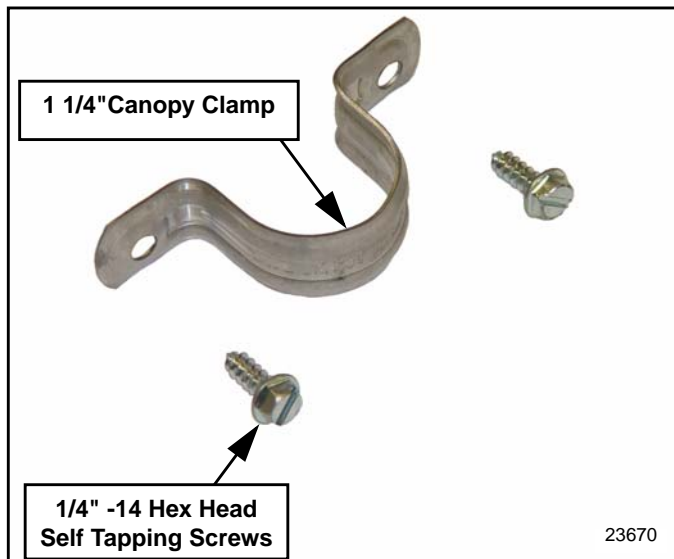


Canopy Mounting Hardware
Figure 2

Refer to Figure 3 & Figure 4:

7. Position a canopy clamp over the accessory bar from the underside of the canopy and centered on a canopy mounting block as shown in Figure 3 and Figure 4.
8. Make two marks on the canopy top through the mounting holes of the clamp.
9. Remove the clamp and drill two 5/32" x 3/4" deep holes in the canopy top.

IMPORTANT: Use a drill stop to set the depth of drill at 3/4". Do not drill through the canopy top.

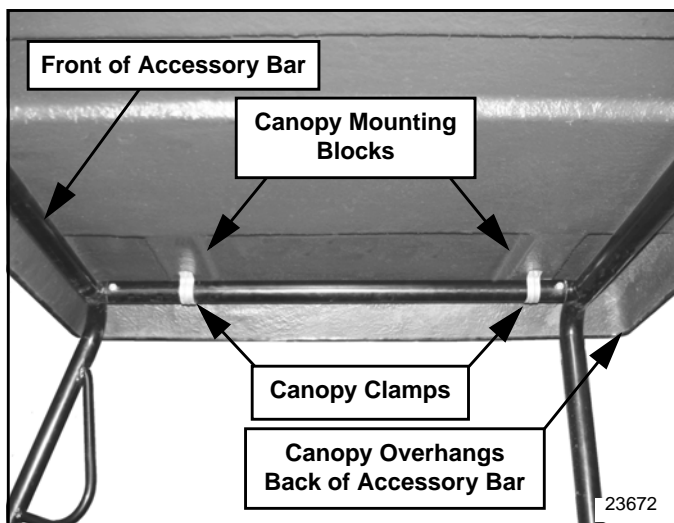


Right Side of Accessory Bar and Canopy Top
Figure 3

10. Attach a clamp to the canopy with the self tapping screws provided in the hardware bag. Tighten as needed to secure the top.

NOTE: Over tightening the screws can strip the threads in the canopy and will require that the canopy clamps be repositioned.

11. Repeat steps 7 through 10 until all four canopy clamps have been installed

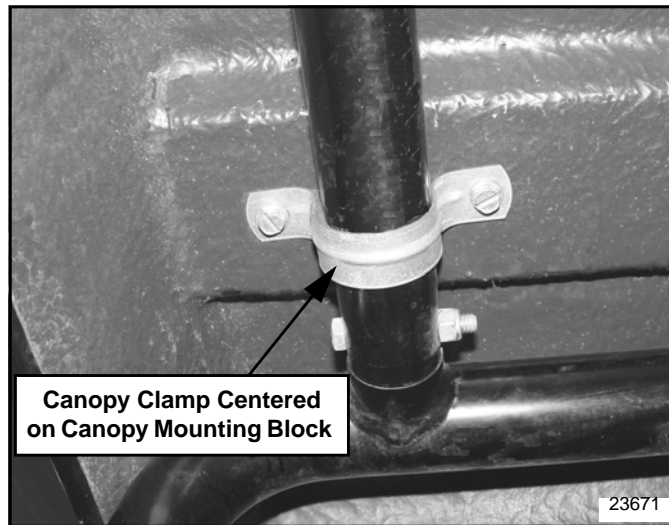

Front Left Corner of Canopy
Figure 4

Listing of Parts

Qty.	Part No.	Part Description
------	----------	------------------

Kit No. 701-078A NT Treker Fiberglass Canopy Green

1	N/A	FIBERGLASS CANOPY, GREEN
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY

Kit No. 701-09A NT Treker Fiberglass Canopy Red

1	N/A	FIBERGLASS CANOPY, RED
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY

Kit No. 701-080A NT Treker Fiberglass Canopy Yellow

1	N/A	FIBERGLASS CANOPY, YELLOW
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY

Kit No. 701-081A ST Treker Fiberglass Canopy Green

1	N/A	FIBERGLASS CANOPY, GREEN
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY

Kit No. 701-082A ST Treker Fiberglass Canopy Red

1	N/A	FIBERGLASS CANOPY, RED
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY

Kit No. 701-083A ST Treker Fiberglass Canopy Yellow

1	N/A	FIBERGLASS CANOPY, YELLOW
1	701-120B	BOLT BAG, FIBERGLASS CANOPY CONTAINS: (8) 1/4" - x 3/4" SELF TAPPING SCREWS (4) 1 1/4" CANOPY CLAMPS
1	701-121M	MANUAL, FIBERGLASS CANOPY



Corporate Office: P.O. Box 5060
Salina, Kansas 67402-5060 USA
www.landpride.com
