

NT & ST Enclosure, Soft Assembly Instructions



Treker NT & ST Series

Manual No. 701-140M

Before You Start



When you see this symbol, the subsequent instructions and warnings are serious - follow without exception. Your life and the lives of others depend on it!

IMPORTANT: Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Your NT & ST Enclosure, Soft is exclusively designed for your Land Pride NT & ST Treker. Please read these installation instructions and your NT & ST Treker Operator's Manual thoroughly before beginning. Especially read information relating to safety concerns. Also included in the Operator's Manual is important information on operation, adjustment, troubleshooting, and maintenance for this attachment (some manual sections do not apply to all accessories).

General Information

These assembly instructions apply to the following NT & ST Enclosure, Soft Accessories listed below:

701-042A Enclosure, Soft ST 00 & 10 Series
701-043A Enclosure, Soft NT 00 Series

Further Assistance

Your dealer wants you to be satisfied with your new NT & ST Enclosure, Soft. If for any reason you do not understand any part of this manual or are not satisfied with the service received, the following actions are suggested:

1. Discuss the matter with your dealership service manager making sure he is aware of any problems you may have and that he has had the opportunity to assist you.
2. If you are still not satisfied, seek out the owner or general manager of the dealership, explain the problem and request assistance.
3. For further assistance write to:

Land Pride Service Department
1525 East North Street
P.O. Box 5060
Salina, Ks. 67402-5060

E-mail address
lpservicedept@landpride.com

Before you begin, read these instructions and check to be sure all parts and tools are accounted for. Please retain these installation instructions for future reference and parts ordering information.

Kit Components:

QTY.	Part Description
2	Side Enclosures
1	Rear Enclosure
8	Snap studs with locking nut

IMPORTANT: Your Land Pride accessory kit is exclusively designed for your Land Pride vehicle. This enclosure attaches to the vehicle using adhesive Velcro and snaps that are supplied with this kit. Please read the installation instructions and operator's manual thoroughly before beginning. Installation of any item is easier if the vehicle is clean and free of debris.

Approximate Installation Time: 45 Minutes

Assembly Instructions

1. Before starting, remove upper windshield and roof from vehicle. Begin by holding either side of the enclosure in place on the vehicle and take note of where to place the adhesive Velcro on the vehicle.
2. Start at top of side closure and apply adhesive Velcro strips to underside of cab frame as shown in Figure 1 at location (A). Be sure to position top notches so they align with brackets for roof.
3. Apply adhesive Velcro to both sides of the rear cab frame. As shown in Figure 2. Position notches to align with brackets on rear cage, if applicable.
4. Apply front adhesive Velcro on the inside of the cab frame. Be sure fabric fits snug / tight when working from top to bottom. As shown in Figure 3 at location (B). Reposition and adjust the placement of the enclosure until it aligns properly prior to applying any Velcro at the bottom.
5. Apply remaining Velcro straps as it lays over the lower windshield, cab frame and inside of dash.
6. Be sure the enclosure is positioned properly prior to installing any snaps. Female snap is already installed on fabric, pull enclosure tight and use existing snap in fabric to mark the drill location for installation of the male portion of the snap, as shown in Figure 4. After marking the hole, drill with a 3/16" drill bit and install the male snap assembly. Finish by tightening the locking nut with a 11/32" wrench.

Assembly Instructions

7. If your Land Pride vehicle currently has a metal rear panel accessory installed please skip to step (8), if not please finish with step (7).

NOTE: The side enclosure panels must be in place.

The back applies directly on the rear cab frame. Begin by attaching the top corners first. With the back aligned properly attach the sides of the back to the mating Velcro on the door panels, sandwiching the door panel between the cab frame and back panel. Self adhesive Velcro will need to be applied to the underside of the cab frame, stretch the panel tight and use the back as a template for proper placement, as shown in figure 5 at location (D). Bottom portion of the rear panel will fit between the back of the seats and bed of vehicle, Velcro is applied accordingly.

NOTE: Notches for the rear panel will not line up and are in place to allow for future use with rear metal panel accessory from Land pride.

8. Installation instructions for vehicles with the accessory metal panel:

NOTE: The side enclosure panels must be in place.

With the rear enclosure panel on the inside of the accessory metal panel begin by attaching the top corners first. The enclosure corner must go between the cab frame and accessory metal panel attaching to the back of the cab frame. Be sure to pull the enclosure tight to allow for proper location for the top strip of Velcro. Install the Velcro from the under side of accessory metal panel (occupant side of the vehicle) at the location shown in figure 5 underneath location (C). Align the sides of rear panel with appropriate notches. Apply the side center flaps of self adhesive Velcro directly to the inside of the metal rear accessory panel. Bottom portion of the rear panel will fit between the back of the seats and bed of vehicle, Velcro is applied accordingly.



WARNING

Be careful to position snaps accurately as it can affect fitting of your enclosure.

NOTE: Always check the overall effect the adhesive Velcro placement will have on part alignment before committing to adhesion.

Assembly Instructions

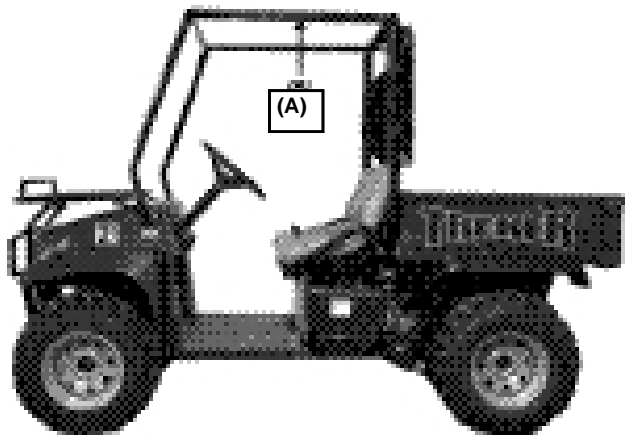


Figure 1

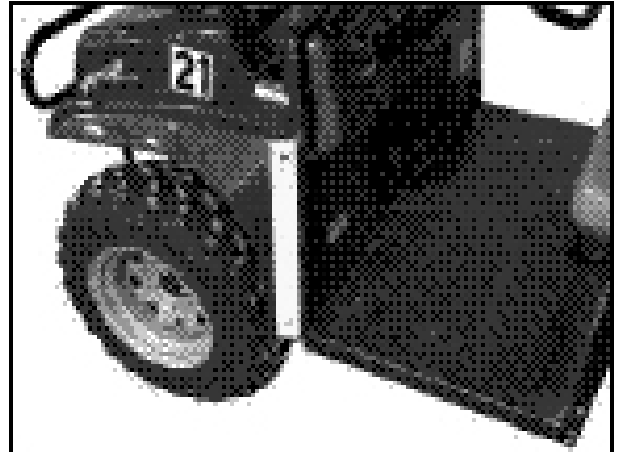


Figure 4



Figure 2

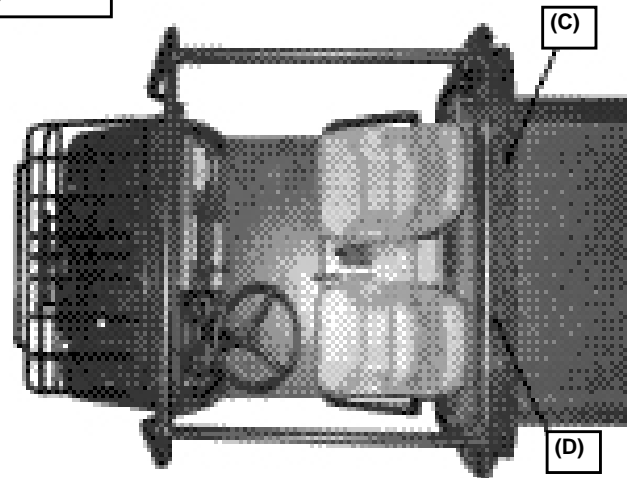


Figure 5

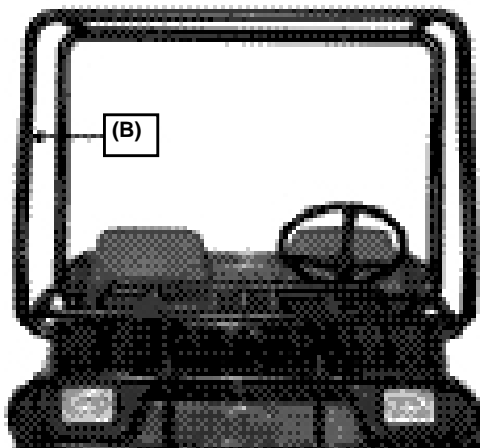


Figure 3



Corporate Office: P.O. Box 5060
Salina, Kansas 67402-5060 USA
www.landpride.com
