



# INSTRUCTIONS

## **701-009A Front Basket**


### **OWNER'S MANUAL**

CUSTOMER MUST RECEIVE A COPY OF THIS INSTALLATION MANUAL AT  
TIME OF SALE

# REFER TO UNIT OWNERS/OPERATORS MANUAL FOR ADDITIONAL CAUTIONS AND INSTRUCTIONS

**OVERVIEW:** This Mesh Basket has been designed to fit nearly all ATV models, with both steel tube racks and plastic racks.

1. Place mesh basket frame on ATV and center all sides for proper alignment.
2. Lay the support brackets on top of wire basket frame to determine proper placement based on requirements below:

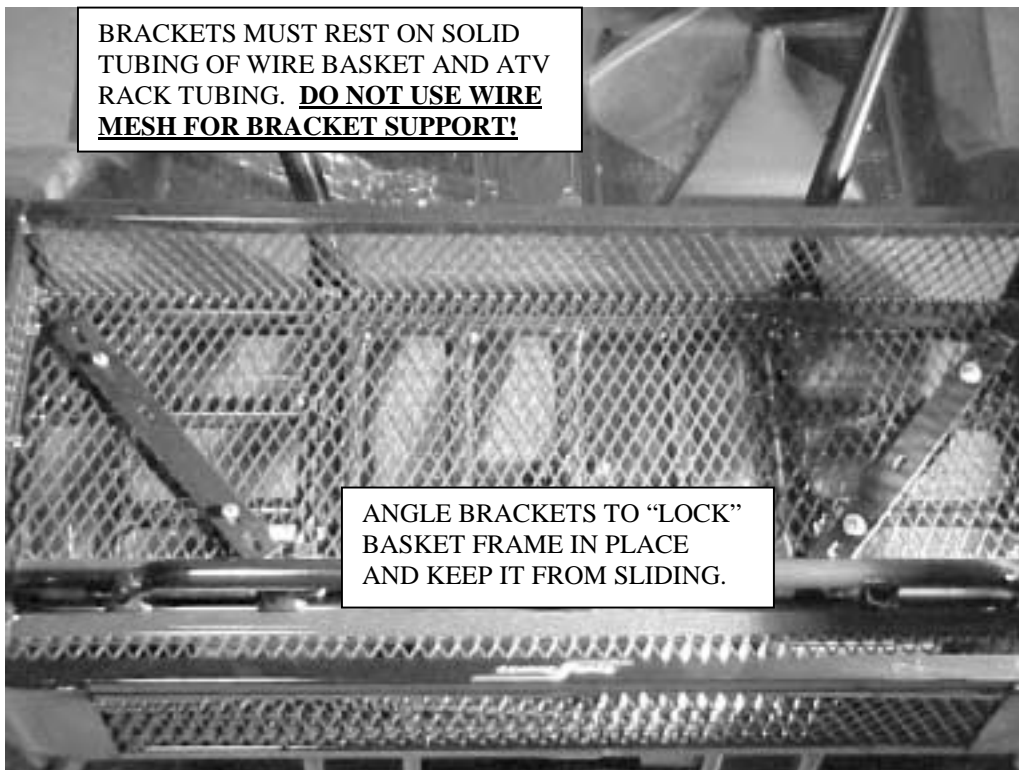

## Parts List

- 1 Basket (Front, Rear, or Rear Drop)
- 4 Mount Bars
- 4 1/4" x 2-1/2" Bolts
- 4 1/4" x 2-3/4" Bolts
- 4 1/4" x 3" Bolts
- 4 1/4" x 2-1/4" Bolts
- 4 1/4" Tinnerman Nuts
- 4 1/4" Flat Washers



**!! CAUTION !!** Insure correct length of bolting hardware is used when installing the Front Basket. Incorrect bolt length may cause damage to ATV body molding.

3. Place the mating brackets beneath upper brackets and bolt together using supplied bolts. **DO NOT TIGHTEN BOLTS** until all brackets are in position.
4. Tighten all bolts, making certain that brackets are supported by **SOLID TUBING ONLY**. Bolts must be secure, but do not over tighten.
5. After initial operation, retighten all bolts. Due to initial vibration, Bolts may loosen.